


# USB-Keybordinterface



- USB-keyboardinterface from one Digimatic-input\*
- Power supply via USB-Interface
- No driver file for the USB-Interface required
- The USB-Interface reveal themselves as a keyboard
- Terminators like Enter or Tab can be adjusted at the USB-Interface
- More settings as language, separator and timer
- Foot switch connector, Data-switch at interface, cable for data transmission or via timer

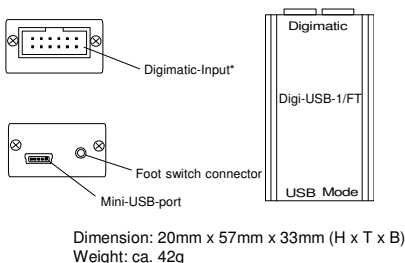

**Digi-USB-1/FT**  
1x Digimatic-input\*

**on request\*\***

\* for measuring instrument with Digimatic-plug from e.g. Mahr or Mitutoyo.

\*\* The current prices on request plus statutory VAT and freight/packaging.

**BOBE** Industrie-Elektronik  
Sylbacher Str. 3  
D-32791 Lage/Lippe

Tel.: +49 (0)5232/95108-0  
Fax: +49 (0)5232/64494

eMail: info@bobe-i-e.de  
Homepage: www.bobe-i-e.de